

2-Pump 18-Station Controllers

Part Number: A0573713
Bulletin Number: SM3-655
Effective: 4/7/04

Write Down Your Serial Numbers Here For Future Reference:

_____	_____
_____	_____
_____	_____

We are committed to a continuing program of product improvement.
Specifications, appearance, and dimensions described in this manual are subject to change without notice.

DCN No. _____
© Copyright 2004
All rights reserved.

Please note that our address and phone information has changed. Please reference this page for updated contact information.



These manuals are obsolete and are provided only for their technical information, data and capacities. Portions of these manuals detailing procedures or precautions in the operation, inspection, maintenance and repair of the products may be inadequate, inaccurate, and/or incomplete and shouldn't be relied upon. Please contact the ACS Group for more current information about these manuals and their warnings and precautions.

Parts and Service Department

The ACS Customer Service Group will provide your company with genuine OEM quality parts manufactured to engineering design specifications, which will maximize your equipment's performance and efficiency. To assist in expediting your phone or fax order, please have the model and serial number of your unit when you contact us. A customer replacement parts list is included in this manual for your convenience. ACS welcomes inquiries on all your parts needs and is dedicated to providing excellent customer service.

For immediate assistance, please contact:

- North, Central and South America, 8am – 5pm CST +1 (800) 483-3919 for drying, conveying, heating and cooling and automation. For size reduction: +1 (800) 229-2919.
North America, emergencies after 5pm CST (847) 439-5855
North America email: acsuscanadacustserv@corpemail.com
- Mexico, Central & South America
Email: acslatinamericacustserv@corpemail.com
- Europe, Middle East & Africa +48 22 390 9720
Email: acseuropecustserv@corpemail.com
- India +91 21 35329112
Email: acsindiacustserv@corpemail.com
- Asia/Australia +86 512 8717 1919
Email: acsasiacustserv@corpemail.com

Sales and Contracting Department

Our products are sold by a worldwide network of independent sales representatives. Contact our Sales Department for the name of the sales representative nearest you.

Let us install your system. The Contract Department offers any or all of these services: project planning; system packages including drawings; equipment, labor, and construction materials; and union or non-union installations.

For assistance with your sales or system contracting needs please Call:

North, Central and South America +1 (262) 641-8600 or +1 (847) 273-7700 Monday–Friday, 8am–5pm CST

Europe/Middle East/Africa +48 22 390 9720

India +91 21 35329112

Asia/Australia +86 512 8717 1919

Facilities:

ACS offers facilities around the world to service you no matter where you are located. For more information, please visit us at www.acscorporate.com

United States:

ACS Schaumburg – Corporate Offices

1100 E. Woodfield Road
Suite 588
Schaumburg, IL 60173
Phone: + 1 847 273 7700
Fax: + 1 847 273 7804

ACS New Berlin – Manufacturing Facility

2900 S. 160th Street
New Berlin, WI 53151
Phone : +1 262 641 8600
Fax: + 1 262 641 8653

Asia/Australia:

ACS Suzhou

109 Xingpu Road SIP
Suzhou, China 215126
Phone: + 86 8717 1919
Fax: +86 512 8717 1916

Europe/Middle East/Africa:

ACS Warsaw

Ul. Działkowa 115
02-234 Warszawa
Phone: + 48 22 390 9720
Fax: +48 22 390 9724

India

ACS India

Gat No. 191/1, Sandbhor Complex
Mhalunge, Chakan, Tal Khed,
Dist. Pune 410501, India
Phone: +91 21 35329112
Fax: + 91 20 40147576

Shipping Information

Unpacking and Inspection

You should inspect your equipment for possible shipping damage. Thoroughly check the equipment for any damage that might have occurred in transit, such as broken or loose wiring and components, loose hardware and mounting screws, etc.

In the Event of Shipping Damage

According to the contract terms and conditions of the Carrier, the responsibility of the Shipper ends at the time and place of shipment.

Notify the transportation company's local agent if you discover damage

Hold the damaged goods and packing material for the examining agent's inspection. **Do not return any goods before the transportation company's inspection and authorization.**

File a claim with the transportation company. Substantiate the claim by referring to the agent's report. A certified copy of our invoice is available upon request. The original Bill of Lading is attached to our original invoice. If the shipment was prepaid, write us for a receipted transportation bill.

Advise customer service regarding your wish for assistance and to obtain an RMA (return material authorization) number.

If the Shipment is Not Complete

Check the packing list as back-ordered items are noted on the packing list. In addition to the equipment itself, you should have:

- ☒ Bill of lading
- ☒ Packing list
- ☒ Operating and Installation packet
- ☒ Electrical schematic and panel layout drawings
- ☒ Component instruction manuals (if applicable)

Re-inspect the container and packing material to see if you missed any smaller items during unpacking.

If the Shipment is Not Correct

If the shipment is not what you ordered, **contact the shipping department immediately**. For shipments in the United States and Canada, call 1 (414) 354-0970; for all other countries, call our international desk at (414) 354-0970. Have the order number and item number available. *Hold the items until you receive shipping instructions.*

Returns

Do not return any damaged or incorrect items until you receive shipping instructions from the shipping department.

Table of Contents

CHAPTER 1: SAFETY	V
1-1 How to Use This Manual	v
<i>Safety Symbols Used in this Manual</i>	v
1-2 Warnings and Precautions	vi
1-3 Responsibility	vii
<i>General Responsibility</i>	vii
<i>Operator Responsibility</i>	viii
<i>Maintenance Responsibility</i>	viii
<i>Reporting a Safety Defect</i>	viii
CHAPTER 2: FUNCTIONAL DESCRIPTION.....	9
2-1 Models Covered in This Manual	9
2-2 General Description.....	9
2-3 Standard Features.....	10
<i>Mechanical Features</i>	10
<i>Electrical Features</i>	10
<i>Controller Features</i>	10
2-4 Optional Features.....	11
2-5 Safety Devices and Interlocks	11
<i>Safety Circuit Standards</i>	11
<i>Fail Safe Operation</i>	11
<i>Safety Device Lock-Outs</i>	12
CHAPTER 3: INSTALLATION	13
3-1 Uncrating	13
3-2 Mounting the Control Panel.....	13
3-3 Electrical Connections.....	13
<i>Making Control Panel Power Drop Wiring Connections</i>	13
<i>Connecting the Control Panel to Vacuum Hoppers</i>	14
<i>Connecting the Control Panel to the Pump Package</i>	14
3-4 Setup	14
<i>Setting the Number of Stations and the Number of Pumps</i>	15
<i>Setting Up Pump Staging</i>	16
<i>Setting Up Alarm Silences</i>	16
<i>Setting Up Stations</i>	17
<i>Setting Up Pumps</i>	19
<i>Finishing Setup: Setting Up Passwords</i>	20
<i>Setup Password</i>	21
<i>Operator Password</i>	21
3-5 Initial Startup	22
CHAPTER 4: OPERATION	23
4-1 Overview	23
4-2 Basic Tasks	23

	<i>Reviewing Station Status</i>	<i>23</i>
	<i>Reviewing Pump Status</i>	<i>25</i>
	<i>Logging On and Logging Off</i>	<i>26</i>
	<i>Enabling and Disabling Stations and Pumps.....</i>	<i>26</i>
	<i>Starting and Stopping the System.....</i>	<i>27</i>
	<i>Reviewing and Adjusting Basic Station Settings</i>	<i>27</i>
	<i>Adjusting Convey Time and Dump Delay.....</i>	<i>28</i>
	<i>Activating and Stopping Priority Convey for a Station.....</i>	<i>29</i>
	<i>Navigating among the “Station Operator” Screens.....</i>	<i>29</i>
4-3	<i>Adjusting Advanced Settings.....</i>	<i>30</i>
	<i>Reviewing and Resetting a Pump Hour Meter</i>	<i>30</i>
	<i>Transferring Stations to a Standby Pump.....</i>	<i>31</i>
4-3	<i>Alarms</i>	<i>33</i>
	<i>Reviewing Alarms.....</i>	<i>33</i>
	<i>Silencing Alarms.....</i>	<i>33</i>
CHAPTER 5: MAINTENANCE		34
CHAPTER 6: CONFIGURABLE SETTINGS.....		35
6-1	<i>Options for Station Setup</i>	<i>35</i>
6-2	<i>Options for Pump Setup</i>	<i>37</i>
CHAPTER 7: TROUBLESHOOTING		38
7-1	<i>General Troubleshooting.....</i>	<i>38</i>
7-2	<i>Alarms</i>	<i>39</i>
	<i>Station Alarms</i>	<i>39</i>
	<i>Pump Alarms.....</i>	<i>39</i>
	<i>System Alarms</i>	<i>39</i>
CHAPTER 8: APPENDIX		40
8-1	<i>Warranty.....</i>	<i>40</i>
	<i>Warranty Specifications.....</i>	<i>40</i>
	<i>Warranty Restrictions</i>	<i>40</i>
	<i>Warranty Liabilities</i>	<i>41</i>
	<i>Customer Responsibilities.....</i>	<i>41</i>
8-2	<i>Optional Components.....</i>	<i>41</i>
8-3	<i>Drawings and Diagrams</i>	<i>42</i>
8-4	<i>Spare Parts List.....</i>	<i>42</i>
8-5	<i>Returned Material Policy</i>	<i>43</i>
	<i>Credit Returns</i>	<i>43</i>
	<i>Warranty Returns</i>	<i>43</i>
8-6	<i>Safety Tag Information</i>	<i>43</i>
	<i>Controller Safety Tags.....</i>	<i>43</i>
8-7	<i>Controller Identification (Serial Number) Tag</i>	<i>44</i>
8-8	<i>Technical Assistance (Contact Information).....</i>	<i>44</i>
	<i>Parts Department</i>	<i>44</i>
	<i>Service Department.....</i>	<i>44</i>
	<i>Sales Department.....</i>	<i>44</i>
	<i>Contract Department</i>	<i>44</i>

Chapter 1: Safety

1-1 How to Use This Manual

Use this manual as a guide and reference for installing, operating, and maintaining your equipment. The purpose is to assist you in applying efficient, proven techniques that enhance equipment productivity.

This manual covers only light corrective maintenance. No other maintenance should be undertaken without first contacting a service engineer.

The Functional Description section outlines models covered, standard features, and optional features. Additional sections within the manual provide instructions for installation, pre-operational procedures, operation, preventive maintenance, and corrective maintenance.

The Installation chapter includes required data for receiving, unpacking, inspecting, and setup of the equipment. We can also provide the assistance of a factory-trained technician to help train your operator(s) for a nominal charge. This section includes instructions, checks, and adjustments that should be followed before commencing with operation of the equipment. These instructions are intended to supplement standard shop procedures performed at shift, daily, and weekly intervals.

The Operation chapter includes a description of electrical and mechanical controls, in addition to information for operating the equipment safely and efficiently.

The Maintenance chapter is intended to serve as a source of detailed assembly and disassembly instructions for those areas of the equipment requiring service. Preventive maintenance sections are included to ensure that your equipment provides excellent, long service.

The Troubleshooting chapter serves as a guide for identification of most common problems. Potential problems are listed, along with possible causes and related solutions.

The Appendix contains technical specifications, drawings, schematics, and parts lists. A spare parts list with part numbers specific to your machine is provided with your shipping paperwork package. Refer to this section for a listing of spare parts for purchase. Have your serial number and model number ready when ordering.

Safety Symbols Used in this Manual

The following safety alert symbols are used to alert you to potential personal injury hazards. Obey all safety messages that follow these symbols to avoid possible injury or death.

- | | |
|------------------------|--|
| <i>Danger!</i> | <i>DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.</i> |
| <i>Warning!</i> | <i>WARNING indicates a potentially hazardous situation or practice which, if not avoided, could result in death or serious injury.</i> |
| <i>Caution!</i> | <i>CAUTION indicates a potentially hazardous situation or practice which, if not avoided, may result in minor or moderate injury or in property damage.</i> |

1-2 Warnings and Precautions

Our equipment is designed to provide safe and reliable operation when installed and operated within design specifications, following national and local safety codes. This may include, but is not limited to OSHA, NEC, CSA, SPI, and any other local, national and international regulations.

To avoid possible personal injury or equipment damage when installing, operating, or maintaining this equipment, use good judgment and follow these safe practices:

- ☑ Read and follow these operation and installation instructions when installing, operating, and maintaining this equipment. If these instructions become damaged or unreadable, additional copies are available from the manufacturer.
- ☑ Follow all SAFETY CODES.
- ☑ Wear SAFETY GLASSES and WORK GLOVES.
- ☑ Work only with approved tools and devices.
- ☑ Disconnect and/or lock out power before servicing or maintaining the equipment.
- ☑ Use care when LOADING, UNLOADING, RIGGING, or MOVING this equipment.
- ☑ Operate this equipment within design specifications.
- ☑ OPEN, TAG, and LOCK ALL DISCONNECTS before working on equipment. You should remove the fuses and carry them with you.
- ☑ Make sure the equipment and components are properly GROUNDED before you switch on power.
- ☑ When welding or brazing in or around this equipment, make sure VENTILATION is ADEQUATE. PROTECT adjacent materials from flame or sparks by shielding with sheet metal. An approved FIRE EXTINGUISHER should be close at hand and ready for use if needed.
- ☑ Do not restore power until you remove all tools, test equipment, etc., and the equipment and related components are fully reassembled.
- ☑ Only PROPERLY TRAINED personnel familiar with the information in this manual should work on this equipment.

We have long recognized the importance of safety and have designed and manufactured our equipment with operator safety as a prime consideration. We expect you, as a user, to abide by the foregoing recommendations in order to make operator safety a reality.

1-3 Responsibility

These machines are constructed for maximum operator safety when used under standard operating conditions and when recommended instructions are followed in the maintenance and operation of the machine.

All personnel engaged in the use of the machine should become familiar with its operation as described in this manual.

Proper operation of the machine promotes safety for the operator and all workers in its vicinity.

Each individual must take responsibility for observing the prescribed safety rules as outlined. All warning and danger signs must be observed and obeyed. All actual or potential danger areas must be reported to your immediate supervisor.

General Responsibility

No matter who you are, safety is important. Owners, operators and maintenance personnel must realize that every day, safety is a vital part of their jobs.

If your main concern is loss of productivity, remember that production is always affected in a negative way following an accident. The following are some of the ways that accidents can affect your production:

- Loss of a skilled operator (temporarily or permanently)
- Breakdown of shop morale
- Costly damage to equipment
- Downtime

An effective safety program is responsible and economically sound.

Organize a safety committee or group, and hold regular meetings. Promote this group from the management level. Through this group, the safety program can be continually reviewed, maintained, and improved. Keep minutes or a record of the meetings.

Hold daily equipment inspections in addition to regular maintenance checks. You will keep your equipment safe for production and exhibit your commitment to safety.

Please read and use this manual as a guide to equipment safety. This manual contains safety warnings throughout, specific to each function and point of operation.

Operator Responsibility

The operator's responsibility does not end with efficient production. The operator usually has the most daily contact with the equipment and intimately knows its capabilities and limitations.

Plant and personnel safety is sometimes forgotten in the desire to meet incentive rates, or through a casual attitude toward machinery formed over a period of months or years. Your employer probably has established a set of safety rules in your workplace. Those rules, this manual, or any other safety information will not keep you from being injured while operating your equipment.

Learn and always use safe operation. Cooperate with co-workers to promote safe practices. Immediately report any potentially dangerous situation to your supervisor or appropriate person.

Maintenance Responsibility

Proper maintenance is essential to safety. If you are a maintenance worker, you must make safety a priority to effectively repair and maintain equipment.

Before removing, adjusting, or replacing parts on a machine, remember to turn off all electric supplies and all accessory equipment at the machine, and disconnect and lockout electrical power. Attach warning tags to the disconnect switch.

Be sure that all non-current carrying parts are correctly connected to earth ground with an electrical conductor that complies with current codes. Install in accordance with national and local codes.

When you have completed the repair or maintenance procedure, check your work, remove your tools. Rigging, and handling equipment.

Reporting a Safety Defect

If you believe that your equipment has a defect that could cause injury, you should immediately discontinue its use and inform the manufacturer.

The principle factors that can result in injury are failure to follow proper operating procedures (i.e. lockout/tagout), or failure to maintain a clean and safe working environment.

Chapter 2: Functional Description

2-1 Models Covered in This Manual

This manual provides operation, installation, and maintenance instructions for 2-Pump, 18-Station Conveying Controllers. Model numbers are listed on the serial tag. Make sure you know the model and serial number of your equipment before contacting the manufacturer for parts or service.

The 2-Pump, 18-Station Conveying Controller is a programmable logic controller, with 24 VDC control circuit, easy-to-use touchscreen operator interface terminal and optional audible/visual alarm.

2-2 General Description

Our material conveying systems create vacuum for the automatic conveying of most free-flowing, dry, pelletized, or granular materials. Material characteristics determine the type of equipment needed to convey the material.

A typical use for our equipment is an in-plant distribution system for plastic processing plants.

Our central vacuum systems are as varied as the applications they service. The tubing and equipment furnished in our system is designed to convey the material(s) specified at the time of purchase at specific rates and distances.

We can advise you on your system capabilities based on system makeup, distance, material, and conveying rates you want.

System capacity is directly affected by the pressure drop in the overall system, such as number of material line bends, pipe length, Y-tubes, T-tubes, etc.

Use the minimum effective amount of vinyl flex hose to maximize material line efficiency. Keep material lines as straight as possible. Refer to Vacuum Pump Product manual (Part No. A0571050) for installation recommendations.

2-3 Standard Features

Mechanical Features

Time-fill Capability. The length of time allowed for material to drain from the station to its receiver. During this time, the controller does not attempt to deliver any more material to the station.

Volume-fill Capability. The length of time a station's vacuum valve remains open to allow material to be drawn in. The vacuum valve will close when material covers the station's volume-fill proximity sensor or this time elapses, whichever comes first.

Vent Valve Output. The vent valve protects the pump motor from damage during high vacuum conditions if an undetected failure of the vacuum switch should occur. The vent valve limits system vacuum by allowing a plunger in the valve to shift and vent the pump.

Closed-Loop Conveying. This feature allows material to be conveyed and processed without being contaminated by outside influences (such as dust, other materials, etc.).

Common Purge Valve Output Control for Each Pump. This feature allows any remaining material to be cleaned out of the vacuum pump or station.

Local Blowback Filter Cleaning Outputs. When this feature is enabled, the controller periodically sends compressed air backward through the pump's air filter to dislodge accumulated dust and debris.

Electrical Features

- 115/1/60 supply voltage
- 24 VDC control voltage
- Single-point power and ground connection
- Non-fused disconnect switch, lockable
- Branch circuit fusing
- Fully accessible NEMA 12-style electrical control enclosure

Controller Features

- Mitsubishi brick PLC icon based
- Monitors Station status and Pump status
- Allows operator to transfer stations to a standby pump when a pump fails
- Electronic time delay between pump startups to prevent an excessive power demand at your facility

2-4 Optional Features

Options marked with “*” indicate options that can be factory installed or retrofitted in the field.

230/1/50 Operation. Required to operate with a 230/1/50 supply voltage.

Audible/visual alarm. Alarm light and horn assembly that can be remote mounted and wired into the controller to indicate an alarm condition.

Ethernet Capability. Enables controller to be connect to an ethernet network.

Line Filter/Surge Suppressor. Recommended for additional protection of electronic control components.

5” touch screen.

2-5 Safety Devices and Interlocks

This section includes information on safety devices and procedures that are inherent to the Controller. This manual is not intended to supersede or alter safety standards established by the user of this equipment. Instead, the material contained in this section is recommended to supplement these procedures in order to provide a safer working environment.

At the completion of this section, the operator and maintenance personnel will be able to do the following:

- Identify and locate specific safety devices.
- Understand the proper use of the safety devices provided.
- Describe the function of the safety device.

Safety Circuit Standards

Safety circuits used in industrial systems protect the operator and maintenance personnel from dangerous energy. They also provide a means of locking out or isolating the energy for servicing equipment.

Various agencies have contributed to the establishment of safety standards that apply to the design and manufacture of automated equipment. The Occupational Safety and Health Administration (OSHA) and the Joint Industrial council (JIC) are just a few of the organizations that have joined with the plastics industry to develop safety standards.

Every effort has been made to incorporate these standards into the design of the conveying system; however, it is the responsibility of the personnel operating and maintaining the equipment to familiarize themselves with the safety procedures and the proper use of any safety devices.

Fail Safe Operation

If a safety device or circuit should fail, the design must be such that the failure causes a “Safe” condition. As an example, a safety switch must be a normally open switch. The switch must be held closed with the device it is to protect. If the switch fails, it will go to the open condition, tripping out the safety circuit.

At no time should the safety device fail and allow the operation to continue for example, if a safety switch is guarding a motor, and the safety switch fails, the motor should not be able to run.

Safety Device Lock-Outs

Some safety devices disconnect electrical energy from a circuit. The safety devices that are used in this Controller are primarily concerned with electrical power disconnection.

WARNING! *Always disconnect and lockout all electrical power and pneumatic (i.e. compressed air) sources prior to servicing the 2-Pump, 18-Station Controller. Failure to do so may result in serious injury. No one but the person who installed the lockout may remove it.*



Chapter 3: Installation

3-1 Uncrating

2-Pump, 18-Station Controllers are shipped mounted on a skid, enclosed in a plastic wrapper, and contained in a cardboard box.

1. Pry the crating away from the skid.

Note: *Remove the nails holding the box to the skid and lift the box off carefully; avoiding staples in the 1' x 4' wood supports. Cut the steel banding.*

2. Use a pry bar to remove the blocks securing the unit to the skid.
3. Lift unit from sides, inserting forklift under the base. The forks must be equidistant from the centerline of the unit and the unit must be balanced on the forks. Lift slowly and only high enough to clear the skid. Use a pry bar if necessary to carefully remove the skid from the unit.
4. Lower slowly.

3-2 Mounting the Control Panel

Note: *Before you mount the panel, consider how you run wiring to the vacuum hoppers, the filter chamber atmospheric valve (if so equipped) and the pump motor starter(s), vacuum switch(es), and vent valve(s).*

Mount the panel on a flat, vertical area. It should be a visible area that gives your operator access to the control. The panel requires a low voltage power drop as listed on the serial tag.

3-3 Electrical Connections

Refer to local electrical codes, the schematic and connection diagrams supplied with this unit and the serial tag for wiring considerations. Run all wiring in conduit if codes require it.

Making Control Panel Power Drop Wiring Connections

Hardwire the input power at 110/1/50-60 VAC or 230V/1/50-60 VAC, depending on the specifications, which are located on the Control Panel Serial Tag. The main power switch is located on the front of the enclosure.

Caution! *We recommend that you protect PLC memory by providing the control panel with a dedicated circuit, a true earth ground, and a spike/surge protector.*

Connecting the Control Panel to Vacuum Hoppers

Note: *Wire size depends on control voltage, distance, number of vacuum hoppers, and the number of wires in each raceway. Consult a qualified electrician.*

1. On 24 VDC control voltage systems, run a common +24 VDC wire and a common 0 (zero) VDC wire from the controller to each vacuum hopper in the system.
2. Run two wires to each vacuum hopper: one each from the controller to the Bin-Full switch (LS) and to the Atmospheric/Sequence-T solenoid (SOL) valve.
3. Make sure that the solenoid and the proximity switch (if supplied) on vacuum hoppers are the same voltage (24 VDC) as the control panel voltage. Consult the control panel serial tag and the solenoid valve nameplates.
4. Properly ground each hopper to reduce static build up generated by material conveying.

Connecting the Control Panel to the Pump Package

1. Wire the pump package motor starter coil (M) to the terminal provided in the control panel enclosure.
2. Wire the pump package vacuum relief valve solenoid (SOL A) to the terminal provided in the control panel enclosure.
3. Wire the pump package vacuum switch (VS) to the terminal located in the control panel enclosure.
4. On 24 VDC control voltage systems, run a common +24 VDC wire and a common 0 (zero) VDC wire from the controller to each pump package in the system.

3-4 Setup


This section provides the procedures for configuring your 2-pump, 18-station controller.

Configuration of your controller includes setting the number of stations and pumps, setting variables such as convey time and blow-back interval, and setting up passwords. We recommend that you carry out these procedures in the order given here.

Note: *Before carrying out these procedures, install all equipment as described in this section and in the manual SPD/SPC Series Conveying Systems.*


Setting the Number of Stations and the Number of Pumps

Figure 1: Default “Station Status” Screen Before Setup

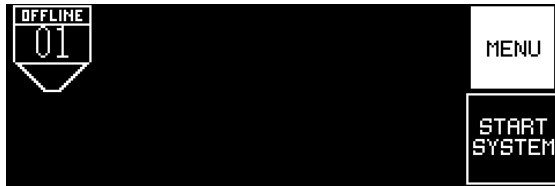


1. At the “Station Status” screen (Figure 1), touch the MENU button. The “Main Menu” screen opens.
2. Once in the Main Menu Screen, press the SYSTEM SETUP button. The “System Setup” screen opens.

Figure 2: “System Setup” Screen

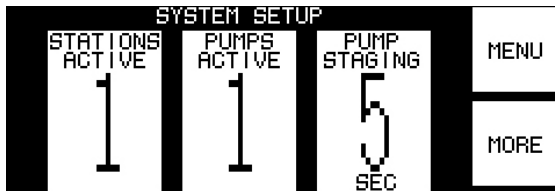

3. At the “System Setup” screen, (Figure 2), touch STATIONS ACTIVE, or PUMPS ACTIVE. A keypad pops up (Shown below) once that particular button is pressed. This screen will allow you to configure the number of stations (1-18) and pumps (1-2) to be controlled by the system.

Setting Values

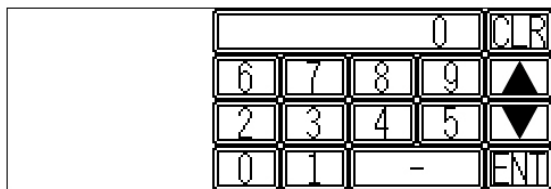

Enter the values you would like to set in the screen by pressing the number keys. Press ENT (Enter) when you are finished to set the new values or CLR (Clear) to erase the current values and reenter new ones. To set the values in the next field, press ENT (Enter) to close the screen shown above. Then select the next number field to enter new values.

4. Once the values have been set in this screen for “Stations Active” and “Pumps Active” press the MORE button to set the Alarm Silence feature.


Setting Up Alarm Silences

When an alarm occurs, a horn sounds and a strobe light flashes at each installed central alarm. An alarm banner appears in the center of the screen. An alarm message and **Silence** button are on the banner. Touching this button silences the horn and turns off the lights for configurable periods of time and causes the alarm banner to disappear. You can set different lengths of time for keeping the horn silent and keeping the light turned off. If a new alarm occurs, the horn sounds and the light turns on again.

To set the lengths of time for suppressing the alarm strobe and horn, complete the following steps:

1. Go to the “System Setup” screen (Figure 3) by touching the SYSTEM SETUP button on the MAIN MENU and pressing MORE in the STATIONS ACTIVE, PUMPS ACTIVE and PUMP STAGING screen.
2. On the “System Setup” screen, touch the STROBE SUPPRESS button. A keypad pops up. See page 15 “Setting Values” for keypad entry instructions.

Figure 3: System Setup Screen (Alarm Configuration)

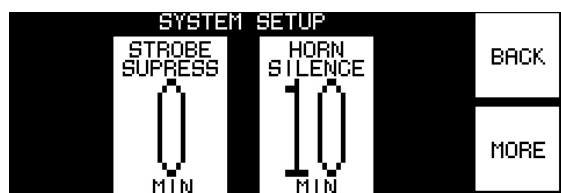

3. Enter the number of minutes (between 0 and 99) that you want the strobe lights to stay off. If you want the light to stay on as long as the alarm persists, change the setting to 0. If you want the light to stay off until a new alarm occurs, enter 99 in the keypad. Use CLR to erase any mistakes. Use ENT to enter the value. The keypad disappears and the new setting appears under STROBE SUPPRESS.
4. On the “System Setup” screen, touch the HORN SILENCE button. A keypad pops up. See page 15 “Setting Values” for keypad entry instructions.
5. Enter the number of minutes (between 0 and 99) that you want the horn to stay off. If you want the horn to stay on as long as the alarm persists, change the setting to 0. If you want the horn to stay off until a new alarm occurs, enter 99 in the keypad. Use CLR to erase any mistakes. Use ENT to enter the value. The keypad disappears and the new setting appears under HORN SILENCE.

Setting Up Pump Staging

To avoid an excessive power demand at your facility when the conveying system starts up, you can stagger the times at which pumps start. Whenever a demand would cause two pumps to start simultaneously, your choice for pump staging sets the delay between the start of one pump and the start of the next. The factory default is a delay of three seconds. You need to change this setting only if this delay is too long or too short for your facility.

To set the delay between the start of one pump and the next, complete the following steps:

1. Go to the “System Setup” screen by touching the SYSTEM SETUP button on the Main Menu screen.
2. Touch the PUMP STAGING button. A keypad pops up.
3. Enter the number of seconds (between 0 and 99) for the length of the delay between the start of one pump and the next. Use CLR to erase any mistakes. Use ENT to enter the value. The keypad disappears, and the new setting appears under PUMP STAGING.

Setting Up Stations

Before starting the system, you must define several settings for each station, such as which pump conveys material to it. This section first discusses how to use the controller's menu system to configure stations. The table on pages 35–36 discusses the individual choices. To set up each station, perform the following:

1. Go to the “Station Status” screen if needed. To reach this screen press station status button on the Main Menu.

Figure 4: “Station Status” Screen



Because of the limited viewing space of the controller screen, you will need to press MORE to view pumps 10-18.



2. On the “Station Status” screen (Figure 4), touch the icon for the station you want to setup, and hold it for several seconds. The “Station Operator” screen opens.

Figure 5: “Station Operator” Screen Before Setup



This screen allows the operator to specify the amount of time that the station will convey, unload, and purge material and also view the amount of time since it had conveyed material last. Touching any white box in the lower half of the screen provides you with a keypad to set new values (See page 15 for keypad entry instructions). From this screen, the operator can also configure the convey settings for each station by pressing NEXT or PREV (The screen above shows the settings for Station 1).

- On the “Station Operator” screen (Figure 5), touch the **SETUP** button. The “Station Setup” screen opens.

Figure 6: “Station Setup” Screen

PREV	STATION 1 SETUP		NEXT	MENU
PRIORITY CONVEY ACTIVATE	ASSIGNED TO PUMP 1	NO CONVEY DISABLED	NO CONVEY TRIES 3	MORE

On the “Station Setup” screen (Figure 6), adjust settings as required. Touching any white box in the lower half of the screen provides you with a keypad to set new values (See page 15 for keypad entry instructions). From this screen, the operator can also configure the convey settings for each station by pressing **NEXT** or **PREV** (The screen above shows the settings for Station 1).

Keypad entry works as with many ATM machines—the first digit you enter initially appears to the right of the decimal point and moves to the left as you enter more digits. You do not need to use the decimal point. Use **CLR** to erase any mistakes. Use **ENT** to enter the value. The keypad disappears, and the “Station Setup” screen shows the new value in the selected white box.

- Once the values have been entered, press **MORE**. The second Station Setup screen opens.

Figure 7: “Second Station Setup” Screen

PREV	STATION 1 SETUP		NEXT	MENU
PURGE DISABLED	DRY AIR DISABLED	SPECIAL CONVEY DISABLED	RESET TO DEFAULTS	BACK

By pressing each button individually, this screen allows the operator to enable or disable the **PURGE**, **DRY AIR** and **SPECIAL CONVEY** features of the conveying system. In addition, by touching the **RESET TO DEFAULTS** button in the right of this screen changes all the settings for this station back to their factory defaults.

See pp. 34–37 for details on the options and their default settings.

From this screen, the operator can also configure the convey settings for each station by pressing **NEXT** or **PREV** (The screen above shows the settings for Station 1).


Once these features have been turned on or off, press **BACK** to return to the last Station Setup screen. After all stations have been configured, press **MENU** to return back to the Main Menu.

Setting Up Pumps

Before starting the system, you must define several settings for each pump, such as how quickly to shut it down when it is not in use. This section first discusses how to use the controller's menu system to configure pumps. The table on page 37 discusses the individual choices. In order to setup up the pumps properly, perform the following:


1. Go to the "Pump Status" screen if needed. To reach this screen, touch the PUMP STATUS button on the Main Menu. The "Pump Status" screen appears:

Figure 8: "Pump Status" Screen

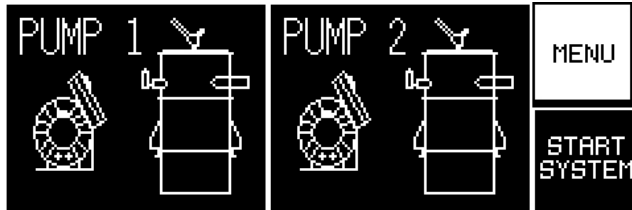


2. Touch the icon for the pump you want to set up, and hold it for several seconds. The "Pump Setup" screen opens.

Figure 9: Pump Setup Screen Before Setup

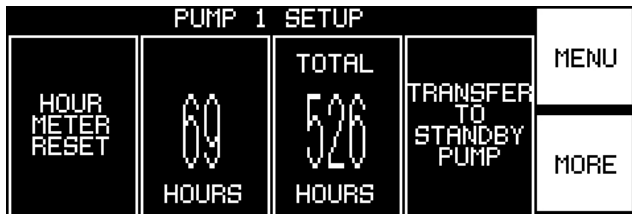

3. This screen shows you how long the pump has run (total hours) and provides you with a resettable hour meter (Press HOUR METER RESET to clear the timer.). It also provides you with the option of transferring pump operation to a standby pump. See page 31 and 32 for specific setup instructions.
4. Press MORE to set up additional pump features. The second pump setup screen opens.

Figure 10: Second Pump Setup Screen

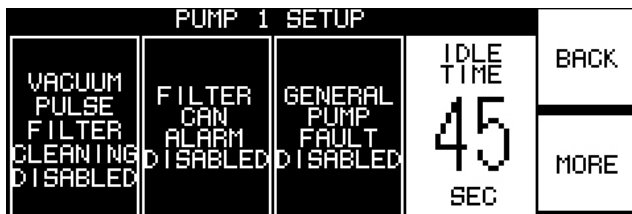

This display allows you to turn On or Off the Vacuum Pulse Filter Cleaner, Filter Can Alarm, and the General Pump Fault. In addition, you can also set the amount of time that the pump remains Idle. Press and hold the IDLE TIME button. The keypad will open. The Idle Time feature can be set between 0 and 999 seconds.

5. Press MORE to set additional pump features. The third pump setup screen opens.

Figure 11: Third Pump Setup Screen

PUMP 1 SETUP				
CONVEYS BEFORE CLEANING	CLEANING PULSES	VACUUM TIME	VACUUM VENT TIME	MENU
5	5	1.0 SEC	1.0 SEC	BACK

The screen shown above allows you to set the number of times the system will convey material before cleaning, the number of cleaning pulses that will be sent, the amount of time (in seconds) that the vacuum will remain on, and the amount of time that the vacuum will vent the system. When pressed individually, the keypad will come up allowing you to enter the necessary values for each feature.

6. Press BACK to return to the second Pump Setup screen, then BACK again. This will take you to the Hour Meter Screen. Once all features have been set, press MENU. This will return you to the MAIN MENU.

See page 37 for details on the options and their default settings.

Setting Alarm Clock

When you are in the Main Menu, you will see a button labeled SET CLOCK. Press this button and the following screen will appear.

[SET CLOCK]										[END]	
8/27/2003										8:51:30	
5	6	7	8	9	-	▲	CLR				
0	1	2	3	4		▼	ENT				

In this screen the user can set the variables which are used to time and date stamp alarms. This feature works in conjunction with the ALARM screen (See page 33) to notify the user of issues which the conveying system had encountered during its operation.

Setting Values

Pressing the individual numbers in the second row of the screen shown above, the operator can select the field (Month, Day, Year, Hours and Minutes) he wishes to change.

Enter the values you would like to set by pressing the number keys. Press ENT (Enter) when you are finished to set the new values or CLR (Clear) to erase the current values and reenter new ones. Press END to return back to the CLOCK MENU screen.

Press the SYSTEM MENU button in the CLOCK MENU SCREEN to return back to the system menu screen and the next set of programmable features.

Finishing Setup: Setting Up Passwords

You can set up passwords for two levels of security: for operators and for setup personnel. The controller comes from the factory with neither password set. This allows every user access to all functions.

Setup Password

If you define a password for setup personnel, then all settings can be changed only after entering the password. The password will be required to display the following screens:

- System Setup (to review and change system-wide settings).
- Station Setup (to review and change settings for all station options).
- Pump Setup (to review and change settings for all pump options).

Operator Password

If you define a password for operators, then a password will be required to carry out *any* function (other than reviewing station and pump status, silencing alarms, reviewing the alarm log, and looking at help screens). Entering the operator's password will give the user access to the functions at the following screens:

- Station Status (to enable or disable a station, and start or stop system)
- Pump Status (to enable or disable a pump, and start or stop system)
- Station Operator (to adjust a station's convey time and dump delay, activate priority convey, and review the station's last convey time and pump assignment; depending on the options installed, the screen may also enable the operator to adjust the purge time).

Entering the setup password will give the user access to all functions.

Note: *If you want to protect the operator's functions with a password, you must also define a setup password. If you leave the setup password undefined, then all users will have access to all functions.*

If you want two different levels of password protection, you must make the passwords different from each other. If the two passwords are the same, then any user who enters the password will have access to all functions.

To set (or remove) password protections, complete the following steps:

1. Go to the "System Setup" screen by touching the SYSTEM SETUP button on the Main Menu screen.
2. Press MORE twice when in the System Setup screen to enter the Operator Password screen.

Figure 12: Operator Password Screen

SYSTEM SETUP				MENU
OPERATOR PASSWORD	PASSWORD DURATION	SETUP PASSWORD	PASSWORD DURATION	
1234	10 MIN	5678	10 MIN	BACK

3. On the "System Setup" screen, touch the Operator Password button or the Setup Password button, depending on which password you want to set up. A keypad pops up, with an entry of 0.

4. Enter up to four digits. If you want to remove password protection, enter 0 as the password. Use CLR to erase any mistakes. Use ENT to enter the value. The keypad disappears, and the “System Setup” screen shows the password you entered.

Note: *When entering a password, all four digits must be supplied. For example, if you enter a password of 2 here, you will need to enter 0002 when the controller prompts for the password.*

If desired, you can also change the duration for which a password remains effective. During operation, the password-protected screens are available either until the user logs off or until this time elapses, whichever comes first. This feature prevents the password from remaining active if a user forgets to log off.

Note: *The password timer starts when the user logs on. It expires even if the user is actively using the screens when the chosen time is up. If the timer expires, the system goes to the “Station Status” screen. Your password duration should be long enough to allow authorized users to complete their tasks but short enough to provide adequate protection against tampering.*

To change the duration of the password, complete the following steps:

1. On the “System Setup” screen, touch the Password Duration button or the Setup Password button, depending on which password duration you want to change. A keypad pops up.
2. Enter the number of minutes (between 1 and 99) that you want to set as the password duration. Use CLR to erase any mistakes. Use ENT to enter the value. The keypad disappears, and the “System Setup” screen shows the new setting.

3-5 Initial Startup

Once you have finished all the setup described above, you are ready to start the system. To start your system, complete the following steps.

1. When in the MAIN MENU screen, touch the STATION STATUS or PUMP STATUS button on the top left side of the display.
2. For each station that you want to use, briefly touch its icon. The icon turns white and says READY, indicating that the station is ready, or the icon turns white and says DEMAND, indicating that the station needs material.
3. Touch PUMP STATUS. The “Pump Status” screen opens (Figure 8)
4. For each pump that you want to use, briefly touch its icon. The pump icon turns white and says READY in the bottom left corner of the button on the screen.
5. Touch START SYSTEM in the lower right-hand corner of the screen.
6. The system starts. If any alarm messages appear on the screen, see p. 38.

Chapter 4: Operation

4-1 Overview

Your 2-pump, 18-station controller electrically controls valves and solenoids to convey material from a central location to individual stations as needed. The controller senses demands for material at the stations and responds to the demands in a timely fashion.

This section gives the procedures for using your controller, and it covers tasks that can be carried out with no password or with an operator's password. The section is divided into three sub-sections:

- Basic tasks: tasks normally carried out by a station operator
- Advanced tasks: tasks normally carried out by setup personnel
- Alarms: silencing and clearing alarms

Note: Before you carry out any of the procedures in this chapter, the system must be set up as described in the previous chapter.

4-2 Basic Tasks

Reviewing Station Status

The starting point for all operations is the “Station Status” screen. This screen is displayed when the unit is first powered up or can be reached by touching STATION STATUS in the Main Menu screen. The “Station Status” screen appears.

Figure 13: “Station Status” Screen During Operation













Note: Press MORE to view the status of stations 10-18.



The status of each station is noted at the top of each icon. See the table on the next page for a complete list of station operating icon labels.

The following table explains the status represented by each icon on the “Station Status” screen.

Icon	Label	Description
	Offline	Station is not enabled. The controller ignores any demands or alarms.
	Ready	Station is enabled and idle (full).
	Demand	Station requires material.
	Convey	Station is being loaded with material.
	Dry Air Convey	Air to convey material is coming from dry air source, rather than ambient air.
	Unload	Station is dumping material into its receiver.
	Priority	Station is in priority convey mode. Its pump will be temporarily dedicated to filling it as soon as possible. **Icon will flash when Priority Convey is active.
	Alarm	Station is in alarm.
	Critical	Station is in critical alarm. The controller has disabled the station until the alarm is cleared.
	Purge	Air is being drawn through material lines.


Additional basic information about each station (convey time, dump delay, and pump assignment) is available at the “Station Operator” screen. See page 27 for details.

Detailed configuration settings for each station are available at the “Station Setup” screen. See page 35 for details about each of these settings.

Reviewing Pump Status





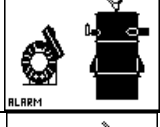


The “Pump Status” screen is the counterpart of the “Station Status” screen. To reach the “Pump Status” screen, touch the MENU button. Once in the Main Menu, touch PUMP STATUS. The “Pump Status” screen appears.

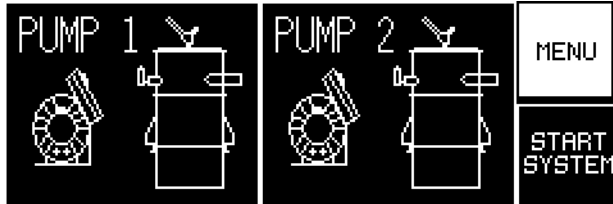Figure 14: “Pump Status” Screen During Operation



The status of each pump is coded and has a label indicating its' status in the bottom-left of the button.

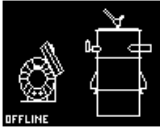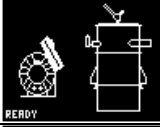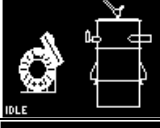The following table explains the status represented by each icon at the Station Status screen.


Icon	Label	Description
	Offline	Pump is not enabled. The controller ignores any alarms.
	Ready	Pump is off, waiting for demand from a station.
	Idle	Pump is on, waiting for demand from a station. If there is no demand before the end of the auto shutdown delay, the pump will turn off.
	Convey	Pump is conveying material to a station.
	Alarm	Pump is in alarm.
	Critical	Pump is in critical alarm. The controller has disabled the pump until the alarm is cleared.
	Ramping Up/Down	Pump is in process of starting or stopping.

Additional basic information about each pump, including configuration settings and the number of hours the pump has been running, is available at the “Pump Setup” screen. For details on configuration settings, see page 37. For details on the hour meter, see page 30.

Logging On and Logging Off

Your controller may be set up to require a password for any operation (other than reviewing station and pump status, silencing alarms, reviewing the alarm log, and looking at help screens). If so, touching a button will open the “Password Entry” keypad screen.

Figure 15: “Password Entry” Screen

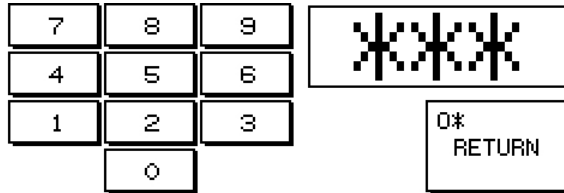

Enter the four-digit password (including any leading zeros). For example, if the password is 1, enter **0001**.

Each digit appears as an “*” as you touch it. When you touch the fourth digit, the controller carries out your request. For example, it enables or disables the requested pump or station, or it goes to the “Station Operator” screen. If you did not enter the correct password, the controller erases the entry. You can then try again. To give up, touch Return.

Note: *If you have lost the password(s), contact us for assistance.*

Once you have logged on, the password remains active until the password expires. (Setup personnel at your facility control the number of minutes before the password expires.) While the password is active, you can continue to carry out password-protected tasks without reentering the password. If the timer expires, the controller goes to the “Station Status” screen and you must reenter the password to continue working.

Enabling and Disabling Stations and Pumps

When a station or pump is disabled, the controller makes no attempt to use it and ignores any alarms that occur for it. Disabling a station or pump at the controller’s screen is similar to bypassing a station with its bypass switch. Enabling a station or pump makes it available for use.

Note: *For a station to be available for the system, it must be enabled at the controller’s screen and its bypass switch must be in the “Convey” position.*

To enable or disable a station (or pump), complete the following steps:

1. Go to the “Station Status” (or “Pump Status”) screen, if needed. To reach this screen, touch the STATION STATUS or PUMP STATUS button in the Main Menu.

Each disabled station (or pump) has an icon with a status of “offline” indicated in it (black with a white outline). All other statuses are enabled statuses.

2. Touch the icon for the station (or pump) briefly. The station (or pump) switches to its new state, as indicated by the outline of its icon and the word READY.

Note: *If the “Station Operator” (or “Pump Setup”) screen appears when you touch the icon, then you have kept your finger on the screen too long. Touch MENU to return to the Main Menu screen and try again.*

Starting and Stopping the System

WARNING! In an emergency, you can use the power switch on the front of the controller cabinet if a password is required to stop the system and you do not know the password.

Note: Normally, all the stations and pumps you want to use should be enabled before you start the system. When the system is stopped, icons for enabled stations and pumps have the word *READY* at the top of their icons. Enabling stations and pumps is described on p. 26.

A button to start and stop the system is located in the lower right of the “Station Status” and “Pump Status” screens. When the system is off, the button reads *START SYSTEM*. When the system is on, the button reads *STOP SYSTEM*. Depending on the setup at your facility, the system may prompt you for a password when you touch this button.

Note: If conveying does not begin when you start the system, check to make sure that all needed pumps are enabled. If they are, check that all needed stations are enabled.

Reviewing and Adjusting Basic Station Settings

The 2-pump, 18-station controller has a “Station Operator” screen for each station, as shown below. This screen enables you to review and adjust all basic settings for the station.

To reach the “Station Operator” screen, complete the following steps:

1. Go to the “Station Status” screen. To reach this screen, touch the *STATION STATUS* button in the Main Menu.
2. Touch and hold the icon for the station, until the controller either prompts for the password or displays the “Station Operator” screen. Once you have entered the password (if needed), the “Station Operator” screen appears.

Figure 16: “Station Operator” Screen

PREV	STATION 1	OPERATOR	NEXT	MENU
CONVEY TIME 20 SEC	LAST CONVEY 17 SEC	UNLOAD TIME 10 SEC	PURGE TIME 15 SEC	SETUP

Buttons in white in the lower half of the screen are settings that you can adjust. Boxes in black are for display only. If a pump assignment or purge time can be changed from the operator screen, this must be done at the “Station Setup” screen. From this screen, you can also adjust the settings for the other stations by touching the *PREV* or *NEXT* buttons.

Adjusting Convey Time and Dump Delay

Convey time is the length of time the station's vacuum valve remains open to allow material to be drawn in. (For a volume-fill station, the valve closes when material covers the station's volume-fill proximity sensor or this time elapses, whichever comes first.)

Unload time is the length of time allowed for material to drain from the station into its receiver. During this time, the controller does not attempt to deliver any more material to the station.

The settings for convey time and unload time should match the times actually required to fill and empty the station. The following problems may occur if these settings are incorrect:

- Material is backing up and causing "high vacuum" alarms (for time-fill stations only): Convey time is too long.
- System is not keeping up with the demand for material: Convey time is too short, or dump delay is too long.

For your reference, the "Station Operator" screen shows the length of time the controller actually spent conveying material during the most recent delivery under Last Convey.

To adjust a station's convey time (or the unload time), complete the following steps:

1. Go to the "Station Operator" screen by touching and holding a station icon, or go to the "Station Setup" screen from the Main Menu.
2. Touch CONVEY TIME. A keypad pops up.
3. Enter the number of seconds desired for convey time or unload time. Use CLR to erase any mistakes. Use ENT to enter the value. The new setting appears under CONVEY TIME (or UNLOAD TIME).

Activating and Stopping Priority Convey for a Station

Note: *Before activating priority convey, make sure that all other stations using the same pump have adequate material in reserve to continue operation. No material will be conveyed to these stations during priority convey.*

If you want the controller to fill a specific station with material immediately, you can activate “priority convey” for that station. When you do so, the controller temporarily dedicates the station’s pump to it, ignoring demands from other stations assigned to that pump. Once the chosen station is full, normal operation resumes.

You can also use this feature to give one station a “head start” by conveying a few loads to it and then stopping the priority convey.

No more than one station for a given pump can be in “priority convey” at once. To activate priority convey, complete the following steps:

1. Go to the “Station Operator” by touching and holding a station icon, or go to the “Station Setup” screen from the Main Menu.
2. Press the SETUP button to enter the Priority Convey screen.
3. Touch PRIORITY CONVEY ACTIVATE. The button changes to PRIORITY CONVEY ACTIVE until the station’s demand has been satisfied (or you stop the priority convey). The controller begins filling the chosen station only (after finishing any conveying already in progress).
4. To stop a priority convey before the station is completely full, Touch the PRIORITY CONVEY ACTIVE button. The button changes to PRIORITY CONVEY ACTIVATE. The controller finishes the current convey, if any, and resumes normal operation.

Navigating among the “Station Operator” Screens

The controls at the top of the screen enable you to move among the “Station Operator” screens:

- To display the screen for the next lower-numbered station (for example, to move from the screen for Station 15 to the screen for Station 14), touch PREV (Previous).
- To display the screen for the next higher-numbered station (for example, to move from the screen for Station 15 to the screen for Station 16), touch NEXT.
- To exit to the “Station Status” (or “Pump Status”) screen, touch MENU.

4-3 Adjusting Advanced Settings

This section describes the procedures carried out during operation that are normally reserved for setup personnel. These procedures require use of the setup password (if your facility has defined one). The procedure for logging on and off with the setup password is the same as for logging on with the operator password; see p. 26 for step-by-step instructions for logging on and off.


Reviewing and Resetting a Pump Hour Meter

The controller keeps two meters for the length of time a pump has run. One, like a car's odometer, keeps a running total and cannot be reset. The other, like a car's trip odometer, counts the running time since the last reset.

To review and reset the hour meter, complete the following steps:

1. At the Main Menu, touch the PUMP STATUS button.
2. Touch and hold the icon for the pump. The "Pump Setup" screen opens.

Figure 17: Pump Setup Screen

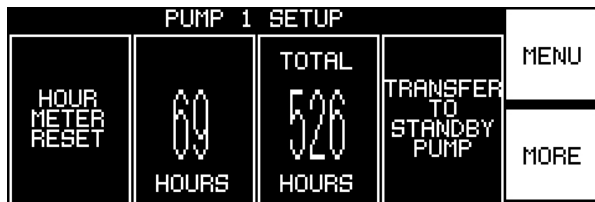

The box labeled x Hours shows the running time since the last reset. The box labeled total x Hours shows total running time.

To reset the resettable meter, touch HOUR METER RESET. The time above x Hours changes to 0.

Transferring Stations to a Standby Pump

If a pump fails, you can transfer all of the controller's station assignments for that pump to a standby pump. To do this, you must disable (take offline) both the source pump and the standby pump, and the standby pump must have no stations already assigned to it.

The transfer operation at the controller's touch screen merely changes the pump assignment for every station on the failed pump. It does not transfer any pump settings for auto shutdown delay, alarms, or blow-back to the standby pump. Mechanical connections must be changed manually.

To transfer stations from a pump to a standby pump, complete the following steps:

1. At the Main Menu, touch the PUMP STATUS button. The "Pump Status" screen appears.
2. Both the source pump and the standby pump must be offline. If either pump is any other state, disable it by touching its icon briefly. The icon becomes black with a white outline and says OFFLINE.
3. Move the vacuum hose from the failed pump to the standby pump, and carry out any other mechanical procedures needed to use the standby pump.
4. At the "Pump Status" screen, touch and hold the icon for any pump until the "Pump Setup" screen appears.
5. At the "Pump Setup" screen, touch Transfer Stations To Standby Pump. The "Transfer to Standby Pump" screen opens:

Figure 18: "Transfer To Standby Pump" Screen



6. Press the number of the pump to be transferred and the keypad will open. Enter the number of the pump to be transferred from and to. Use CLR to erase any mistakes. Use ENT to enter the value.

Note: When you enter the second pump number, the controller checks to make sure that both pumps are offline and that the standby pump has no stations assigned to it. If these conditions are not all met, error messages appear on the screen instead of the MOVE button. If you get an error message, first check to make sure that you have entered the correct numbers and reenter if necessary. If another error occurs, see the Standby Pump Errors section on page 32.

7. Touch the MOVE button. When transfer is complete, stations moved will appear on the screen.
8. Touch BACK, to return to the "Pump Setup" screen. You will have to press MENU to return to the Pump Status display. There is no direct way back to this screen.

9. Put the standby pump online by briefly touching its icon. The icon changes codes to show the new status, and the system begins using the pump. In addition, all “Station Operator” and “Station Setup” screens show the new pump assignment.

Standby Pump Errors

If the error message tells you to disable the source pump and/or the standby pump, touch RETURN at this screen, then PUMP STATUS at the “Pump Setup” screen. Take the pumps offline and then return to the “Transfer to Standby Pump” screen.

If the error message tells you that the standby pump has stations assigned, you must either use a different standby pump or you must remove the pump assignment for all stations assigned to the standby pump. To remove the assignments, complete the following steps:

1. Touch BACK at the “Standby Pump” screen, and then touch Menu then STATION STATUS.
2. Touch and hold a station icon to get to the “Station Operator” screen.
3. Then touch STATION SETUP to go to the “Station Setup” screen.
4. Use PREVIOUS and NEXT to review all pump assignments.
5. Where necessary, choose ASSIGNED TO PUMP to set station assignments to 0 (unassigned). Then return to the “Transfer to Standby Pump” screen.
6. Touch left side pump value and enter the number of the pump whose hoppers are to be transferred.
7. Touch right side pump value and enter destination pump number.

Filter cleaning

Our pumps have two options available for filter cleaning; these are vacuum pulse or compressed air filter cleaning. Touching the **ENABLE/DISABLE** button located in the lower left hand corner of the pump setup screen will allow the operator to turn on/off these two options or disable the filter cleaning option altogether.

Note: *Each type of filter cleaning requires optional equipment that must be purchased and installed prior to enabling this option.*

4-4 Alarms

Reviewing Alarms

To review your system's alarms, touch ALARM HISTORY on the Main Menu. The "Alarm Log" screen appears, with the newest alarm listed first.

Figure 19: Alarm Log Screen



Date/Time	Comment
10/18/03 11:38	S 01 NO CONV
10/17/03 23:17	S 13 HIGH VAC

DOWN

UP

MENU

To scroll up and down through the list, touch DOWN or UP at the bottom of the screen.

Press MENU to return to the Main Menu screen.

Silencing Alarms

Whenever a new alarm occurs, your controller sounds the horn and turns on the strobe light at each central alarm.

Touch SILENCE on the alarm message banner that appears when a new alarm occurs.

The horns and lights at the central alarms turn off. Your controller has separate, configurable settings for how long the horns should remain silent and how long the light should remain off. If the alarm condition still exists when either of these times elapses, the corresponding device (horn or light) turn on again and the alarm message banner appears. If a new alarm occurs, both horns and lights turn on. See page 38 for a list of alarms and their possible causes.

Chapter 5: Maintenance

Although no periodic maintenance is required on this unit, the Service Menu screen provides information on accessing components of the conveying system to perform maintenance on them.

To gain access to the Service Menu screen, press the SERVICE MENU button in the Main Menu.

Note: *This service menu screen is **PASSWORD PROTECTED** and meant for manufacturer personnel use only. Contact manufacturer for assistance.*

Chapter 6: Configurable Settings

This section describes the proper setup of the 2 pump, 18-station control system parameters. These parameters are operator changeable; however, these items should require setup only during the initial installation. Only authorized personnel should change them.

Many of the variables and setup parameters have been preset at the factory and do not need to be changed. However, this section of the manual will address all of the setup parameters that were available at the time of printing. The purpose of this is to familiarize the reader with all the setup parameters and their usage.

6-1 Options for Station Setup

Name	Description	Options	Default
Conveying Options			
Convey time	Length of time the station's vacuum valve remains open to allow material to be drawn in. (For a volume-fill station, the valve closes when material covers the station's volume-fill proximity sensor or this time elapses, whichever comes first.) Adjust this value to match the actual time needed to fill the station.	1–999 sec.	30 sec.
(Last convey time)	<i>Display only.</i> Length of time the station's vacuum valve was open for receiving material during the most recent convey. This information is displayed for your reference when adjusting convey time and dump delay.	—	—
Unload delay	Length of time allowed for material to drain from the station into the receiver. The controller will not attempt to deliver more material to the station until this time has elapsed. Adjust this value to match the actual time needed to drain the station. If it is set too short, the controller may attempt to refill the station before it is empty, causing material to back up and/or underusing the station's capacity. If it is set too long, the system may be unable to keep up with your equipment's demand for material.	1–99 sec.	10 sec.
Dry air	When this option is enabled, dry air will be used to convey material to station (Requires additional optional equipment.)	disabled, enabled	disabled
Purge	When this option is enabled, source air is used to cleanout the stations material line after every convey. (Requires additional optional equipment.)	disabled, enabled	disabled
Purge time	Amount of time allowed to clear material line.	0–999	15 sec.
Assigned to pump <i>n</i>	Number (address) of the pump to which this station's vacuum line is connected.	0–4 (0 = not assigned)	0

Name	Description	Options	Default
Special convey	When this option is enabled, the station's vacuum valve remains open for the convey time, even if the station is not demanding material and is indicating that it is full. When disabled, the station's vacuum valve opens when there is demand from the station, and it remains open until the convey time has elapsed or material trips the volume-fill proximity switch. Enable this option if and only if the station has no flapper.	disabled, enabled	disabled
Name	Description	Options	Default
Alarm Options			
No convey	When this option is enabled, the controller issues a "no convey" alarm if it has repeatedly attempted to convey material to the station but the flapper never opened during the dump delay. (The number of attempts is controlled by the next setting.) Usually this option should be enabled. At times, you may wish to disable it during operation as a stopgap measure for dealing with an alarm.	disabled, enabled	disabled
# attempts before alarm	Number of attempts before alarm: the number of times the controller will attempt to convey material to a station before it issues a "no convey" alarm. The setting for this option depends on (a) how much material your injection mold uses to make each part compared with the capacity of the receiver and (b) how important it is to keep your injection mold from running out of material and shutting down. A higher setting will give you fewer alarms, at the risk of emptying the receiver without warning. A lower setting will give more frequent alarms, at the risk of disrupting operations unnecessarily.	1–99	3

6-2 Options for Pump Setup

Several of the items in this screen are not setup options but are instead intended for use during operation. These items (hour meter and transferring stations to a standby pump) are described in Chapter 4, which cover operation procedures.

Name	Description	Options	Default
Idle Time Options			
1 Idle time	Length of time the pump continues to run unloaded without demand from any station. After this time has elapsed, the pump shuts down to save power and to prevent wear on the pump. Adjust this setting to fit the needs of your facility in trading off the energy savings against the costs associated with waiting for a pump to start up when there is a demand for material.	0–999 sec.	45 sec.
Alarm Options			
General Pump fault	The control has one input/pump that you can wire to generate alarms for situations of your choosing. For example, you may have a sensor that turns on when material reaches the top of a filter-chamber waste bin. When this option is enabled, the controller issues an alarm if the sensor wired to the input for Pump Fault turns on. Enable this option if and only if your facility has installed a miscellaneous alarm on the input for Pump Fault for this pump.	disabled, enabled	disabled
Pump Filter Cleaning Options			
Vacuum pulsed filter cleaning (Compressed air filter cleaning)	When this option is enabled, the controller periodically sends compressed air backward through the pump's air filter to dislodge accumulated dust and debris. Enable this option if and only if the pump has the equipment for compressed-air filter cleaning.	disabled, vacuum pulse enabled, comp air enabled	disabled
Conveys before cleaning	Number of conveying cycles to stations between filter cleanings. Adjust this setting based on experience. The more dust and debris in your material line, the smaller this number needs to be.	1–99	5
Cleaning pulses	Number of pulses of compressed air sent through the pump's filter during cleaning. If filter-cleaning is not working as desired, the service department may ask you to change this setting.	1–99	5
Pulse On time (Compressed air cleaning only)	Number of seconds that the air compressor remains on for each pulse during filter cleaning. If filter-cleaning is not working as desired, the service department may ask you to change this setting.	0–9.9 sec.	3.0 sec.
Pulse Off time (Vacuum Pulse cleaning only)	Number of seconds between air pulses during filter cleaning. If filter-cleaning is not working as desired, the service department may ask you to change this setting.	0–9.9 sec.	1.5 sec.
Vacuum time	Amount of time clearing valve is closed and vacuum increases inside filter chamber.	0–9.9 sec.	3.0 sec.
Vacuum vent time	Amount of time clearing valve is open to allow air to reverse flow through filter.	0–9.9 sec.	1.5 sec.

Chapter 7: Troubleshooting

7-1 General Troubleshooting

Problem	Possible Cause	Solution
The control panel doesn't light up at all	The control panel is not turned on.	Turn on the control panel.
	Fuse/circuit breaker in the power drop is blown/tripped.	Replace/reset.
	Control power switch is broken.	Replace.
The touch screen display doesn't come on when the control panel is powered up.	Fuse in display is blown.	Replace.
	Loose wiring to display.	Repair.
	Display is faulty.	Replace.
A pump package doesn't run, even though it is on-line and its indicator is lit.	The motor overload has tripped.	Reset the overload and check the motor for the proper amp draw on tag.
	Main fuse in power drop or optional fused disconnect has blown.	Replace the fuse.
	Motor contact is faulty.	Repair or replace as required.
A vacuum receiver is being bypassed in the loading cycle.	The vacuum receiver is off-line.	Use the controller to put the vacuum receiver on-line.
	The convey time for the vacuum receiver is set to zero.	Use the controller to enter a longer convey time.
	The field-installed station bypass switch is simulating a Bin Full condition.	Normal operation. Set the switch so the vacuum receiver is back in the loading sequence.
	The field-installed station bypass switch is bad or mis-wired.	Repair, replace, or re-wire.
	The vacuum receiver was assigned to the wrong pump during setup.	Repeat the setup procedure.
Vacuum receivers are overfilling.	Conveying times are too long (Time Fill Mode only).	Time the vacuum receiver (s) during loading, and set the conveying times to a few seconds less.
	Maximum conveying times are too long, and the PLC does not recognize the Vacuum Receiver Full Proximity Switch(es).	Check proximity sensors for proper operation and proper wiring to the PLC. Repair as needed. Reset the conveying times to a reasonable value, and adjust as needed.

7-2 Alarms

The format for all station alarms is “Station *n* [alarm text],” for example, “Station 12 receiver low level.” The format for all pump alarms is “Pump *n* [alarm text].” Any alarm that does *not* start with “Station” or “Pump” is a system alarm.

The following tables list all alarms alphabetically, together with possible causes. A “critical” alarm is one that causes the affected device to stop.

Note: *You can also see a list of alarms and their causes in the controller’s online help. To display this information, touch the color key of statuses in the upper right-hand corner of either the “Station Status” or the “Pump Status” screen, or touch **Help** at any other screen. When you are finished reviewing the help, touch **Return**.*

Station Alarms

Alarm message	Possible cause
High vacuum	Material line is blocked.
	Vacuum line is blocked.
	Convey time is too long (time-fill station only).
	Sequence valve has malfunctioned.
	Vacuum switch has malfunctioned.
	Note: After you have corrected the cause of this alarm, the alarm will be cleared when the controller has conveyed a full load to this station.
No convey	Material container is empty.
	Material line is disconnected from material source.
	Vacuum line is disconnected from station.
	Take-off compartment is not adjusted properly.
	Convey time is too short.
	Note: As a stopgap measure, you can disable the “no convey” alarm for this station until the problem can be remedied. See pp. 36.
Not assigned (<i>Critical</i>)	Station has not been assigned to a pump

Pump Alarms

Alarm message	Possible cause
Pump failure (<i>Critical</i>)	Circuit breaker or overload protector has tripped.
	Contactor has malfunctioned.
Pump fault	(Function determined by your facility.)
Too many stations assigned to pump (<i>Critical</i>)	More than 20 stations are assigned to this pump.

System Alarms

Alarm message	Possible cause
Low battery	Battery for the controller is defective.
	Battery for the controller is old and drained.

Chapter 8: Appendix

8-1 Warranty

Unless otherwise specified, this product includes a Standard **ONE YEAR PARTS AND LABOR WARRANTY**.

Warranty Specifications

The manufacturer hereby expressly warrants all equipment manufactured by it to be free from defects in workmanship and material when used under recommended conditions, as set forth in the operating manuals for such equipment. THE FOREGOING EXPRESS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, GUARANTEES, AGREEMENTS, AND SIMILAR OBLIGATIONS OF THE COMPANY AND/OR MANUFACTURER (UNLESS OTHERWISE SPECIFIED IN THE SPECIFIC PRICE PAGE OR LIMITED BY THE MANUFACTURERS' WARRANTY FOR PARTS). The Company's obligation is limited to repair or replace FOB the factory any parts that are returned, prepaid, within one year of equipment shipment to the original purchaser, and which in the Company's opinion, are defective. Any replacement part assumes the unused portion of this warranty.

Warranty Restrictions

This parts warranty does not cover any labor charges for replacement of parts, adjustment repairs, or any other work. This warranty does not apply to any equipment which, in the Company's opinion, has been subjected to misuse, negligence, or operation in excess of recommended limits, including freezing or which has been repaired or altered without the Company's express authorization. If the serial number has been defaced or removed from the component, the warranty on that component is void. Defective parts become the property of the warrantor and are to be returned immediately, without any further use or handling.

Warranty Liabilities

THE COMPANY EXPRESSLY DISCLAIMS ANY AND ALL LIABILITY FOR ANY SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES OR EXPENSES THAT RESULT FROM THE USE OF THIS PRODUCT. Some states do not allow the exclusion or limitation of special, consequential or incidental damages, so the above limitation may not apply to you. The Company's obligation for parts not furnished as components of its manufactured equipment is limited to the warranty of the manufacturers of said parts. The company neither assumes nor authorizes any other persons to assume for it any liability in connection with the sale of its equipment not expressed in this warranty. No person, agent, manufacturer, distributor, dealer, installer or company is authorized to change, modify or extend the terms of this warranty in any manner whatsoever.

The time within which an action must be commenced to enforce any obligation of the Company's arising under this warranty, or under any statute or law of the United States or any state thereof, is hereby limited to the duration of this warranty. Some states do not permit this limitation, so the above may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. For transactions involving the potential applicability of international law or that of a foreign country, this warranty policy and the procedures hereunder shall be governed by applicable federal and state law, but not by the United Nations Convention on Contracts for the Sale of Goods.

Customer Responsibilities

Any sales, use, or other tax incident to the replacement of parts under this warranty is the responsibility of the purchaser.

8-2 Optional Components

The following is a list of options that your controller may be equipped with:

230/1/50 Operation. Required to operate with a 230/1/50 supply voltage.

Audible/visual alarm. Alarm light and horn assembly that can be remote mounted and wired into the controller to indicate an alarm condition.


Ethernet Capability. Enables controller to be connected to ethernet network.

Line Filter/Surge Suppressor. Recommended for additional protection of electronic control components.

5" touch screen.

8-3 Drawings and Diagrams

Figure 22: 2 pump 18 station Controller with 6-1/2" Display

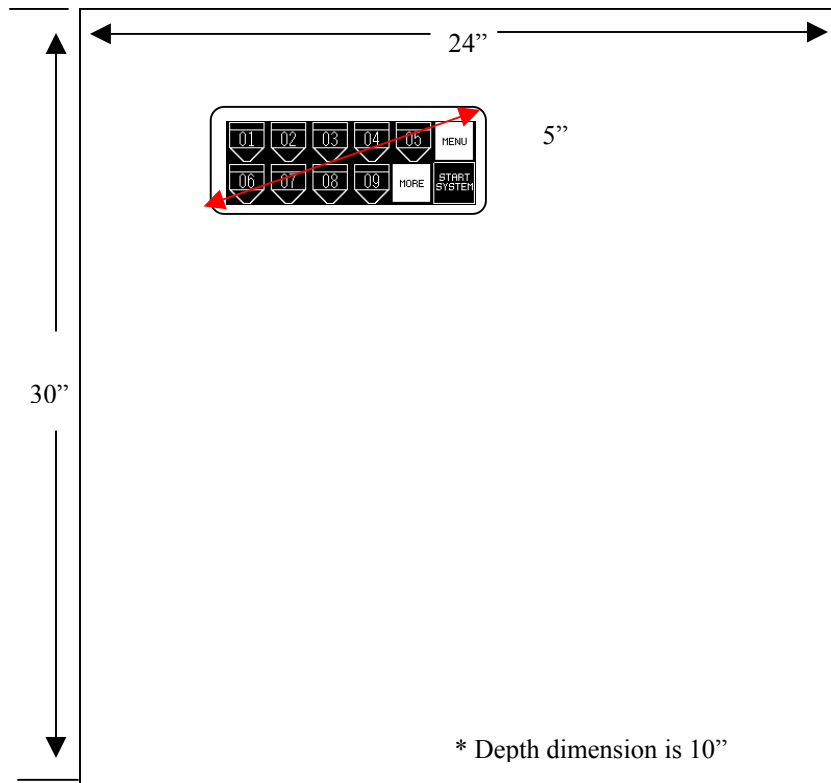

Also, review electrical drawings supplied in the packet with this manual.

8-4 Spare Parts List

Quantity	Part Number	Description
1	A0569874	AB 20A Power Supply, 24VDC, #1606-XL480EP
1	A0569870	Relay Magnecraft #781XAXML
1	A0569859	Filter/Grill
1	A0540997	Fuse, MDL –1
1	A0542210	Fuse, MDL – 5
1	A0544793	Fuse, MDL – 15
5	A0542205	Fuse, MDL – 2.5
1	A0542209	Fuse, MDL - 4

8-5 Returned Material Policy

Credit Returns

Prior to the return of any material, **authorization** must be given by **the manufacturer**. A RMS number will be assigned for the equipment to be returned.

Reason for requesting the return must be given.

All returned material purchased from **the manufacturer** is subject to 15% (\$75.00 minimum) restocking charge.

All returns are to be shipped prepaid.

The invoice number and date or purchase order number and date must be supplied.

No credit will be issued for material that is not within the manufacturer's warranty period and/or in new and unused condition, suitable for resale.

Warranty Returns

Prior to the return of any material, **authorization** must be given by **the manufacturer**. A RMS number will be assigned for the equipment to be returned.

Reason for requesting the return must be given.

All returns are to be shipped prepaid.

The invoice number and date or purchase order number and date must be supplied.

After inspecting the material, a replacement or credit will be given, at **the manufacturer's** discretion, if the item is found to be defective in materials or workmanship. Purchased components are covered under their specific warranty terms.

8-6 Safety Tag Information

Controller Safety Tags



High Voltage
Inside Enclosure



Read Operation and
Installation Manual

8-7 Controller Identification (Serial Number) Tag

(Located on the side of the controller box)

Street Address		
Town, State, Zip Code		
Telephone Number		
Fax Number		
<hr/>		
XXX CONTROL PANEL		
Model No. XXX2-18		Serial No. 31K0182
115	Volt	60 Hz
		1 Ph
Control Voltage 24VDC		
<div></div>		

8-8 Technical Assistance (Contact Information)

Parts Department

Call toll-free 7am–5pm CST [800] 423-3183 or call [414] 354-0970, Fax [414] 354-6421

The ACS Customer Service Group will provide your company with genuine OEM quality parts manufactured to engineering design specifications, which will maximize your equipment's performance and efficiency. To assist in expediting your phone or fax order, please have the model and serial number of your unit when you contact us. A customer replacement parts list is included in this manual for your convenience. ACS welcomes inquiries on all your parts needs and is dedicated to providing excellent customer service.

Service Department

Call toll-free 8am–5pm CST [800] 657-4679 or call [414] 354-0970

Emergencies after 5pm CST, call [847] 439-5655

We have a qualified service department ready to help. Service contracts are available for most of our products.

Sales Department

Call [414] 354-0970 Monday–Friday, 8am–5pm CST

Our products are sold by a world-wide network of independent sales representatives. Contact our Sales Department for the name of the sales representative nearest you.

Contract Department

Call [414] 354-0970 Monday–Friday, 8am–5pm CST

Let us install your system. The Contract Department offers any or all of these services: project planning; system packages including drawings; equipment, labor, and construction materials; and union or non-union installations.